



**INSTALLATION INSTRUCTIONS**  
**SADDLEBAG SUPPORT FOR 2006-2010 FXST**  
**2007-10 FLSTF, 2008-10 FLSTSB**  
 Mfg. p/n 110840  
 (See pkg. label for Dist. p/n)

**ATTENTION INSTALLER** (if other than owner):  
 Please forward this instruction sheet and the warranty card to the purchaser of this product. These instructions also contain valuable information necessary to the end user.

**INTRODUCTION:**  
 These instructions describe the procedure for properly installing KHROME WERKS® Saddlebag Supports on 2007-10 FLSTF Fat Boy®, 2008-10 FLSTSB and 2006-2010 FXST, FXSTB and FXSTC Softail® Harley-Davidson® models. Review instructions carefully before beginning, as they contain important information. Please retain for future reference.

Particularly important information is distinguished in these instructions by the following notations:

**NOTE:** A NOTE provides key information to make procedures easier or clearer.

**CAUTION:** A CAUTION indicates special procedures that must be followed to avoid damage to the motorcycle or accessories.

**WARNING:** A WARNING indicates special procedures that must be followed to avoid injury or death to a motorcycle operator or person inspecting or repairing the motorcycle.

- TOOLS REQUIRED:**
- 1 . 5/16+hex key wrench
  - 1 . Loctite® 242 (blue) thread locker


**PROCEDURE:**

**NOTE:** These supports can be installed on a motorcycle with or without a sissy bar.

**WARNING:** **All models:** Mounting screws supplied may be too long or too short when combined with other accessories. Use longer screws if less than one thread extends past the threaded insert in the inner fender bracket. Use shorter screws if the threads extend more than two threads past the threaded insert in the inner fender bracket. Adequate clearance must be maintained. Failure to maintain adequate clearance could result in the bolt end contacting the tire, possibly resulting in serious injury or death.

1. Remove two forward fender mounting button head screws just behind the seat (do one side at a time).
2. Using the new supplied socket head cap screws and the High Collar under the head+lock washers, install Saddlebag Support onto fender support. Apply 1-2 drops of Loctite® 242 (blue) onto threads of screws. Tighten to 27 ft-lbs (37 Nm). Repeat for the other side.

**NOTE:** If installed with a sissy bar omit High Collar lock washers. Use two 3/8+supplied flat washers between the fender support and the front mounting boss.

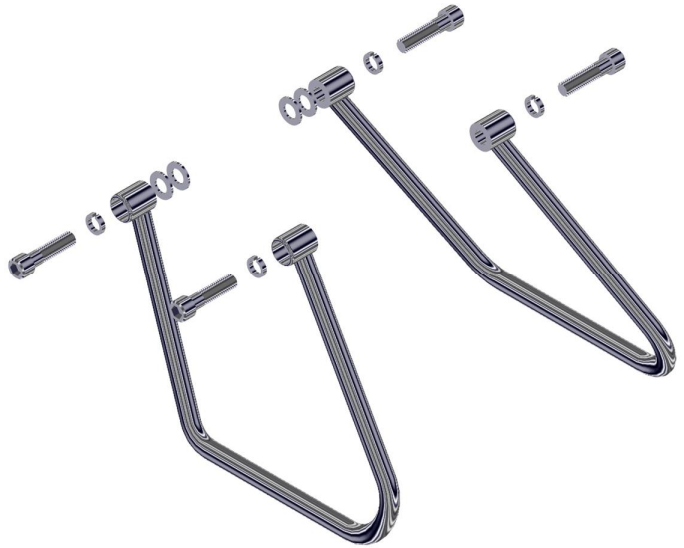

**BILL OF MATERIALS**

Mfg p/n	Description	Qty.
110841	Saddlebag Support, Left	1
110842	Saddlebag Support, Right	1
420238	Lock Washer, 3/8+high collar	4
420291	Washer, Type B Narrow, 3/8+	4
430522	Screw, SHCP 3/8-16 x 1 1/2+	4

**WARNING:** Saddlebags must be secured to the supports with straps supplied by saddlebag manufacturer. Upon initial installation ensure that no parts of the bags or the mounting straps could interfere with operation of rear belt (or chain), shocks or wheels. We recommend throw-over saddlebags be mounted securely under the seat (not thrown over it). Periodically check straps to ensure proper installation.

**USE AND CARE:** Wash your accessories with the same care you use when washing your motorcycle. Use mild soap and water. DO NOT use abrasive chemicals or cleaners, or high pressure washers.

**KHROME WERKS®**  
**P.O. BOX 355 • New Prague, MN 56071**